



HYBRID INSTALLATION INSTRUCTIONS

Thank you for purchasing ROCKSTAR™ Hybrid Splash Guard Mud Flaps. Agri-Cover, Inc. proudly manufactured these mud flaps using superior quality materials and workmanship. With proper care, your mud flaps will provide years of service and enjoyment.

NOTICE TO INSTALLER: Even if familiar with product, read instructions prior to installation as improvements may be made without notice. Always handle components with care. If you have questions or problems, call customer service. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read safety and maintenance section of these instructions. Save these instructions for future reference.

FOR YOUR RECORDS

DATE PURCHASED: _____

WHERE PURCHASED: _____



Questions? 888-568-3709
agricover.com

PREPARATION

Unpack components and clean vehicle wheel wells. For additional installation assistance, go to rockstarmudflaps.com for install video.

MUD FLAP COMPONENTS

- (2) Mud flap tops
- (2) Mud flap bottoms
- (2) Stabilizing brackets
- Hardware

TOOLS NEEDED

- Angled drill/screwdriver with 5/16" socket
- Locking pliers
- Protective eyewear
- Ratchet with 7/16" socket

NOTE: Always verify mud flap is level before completing installation.


1: PREPARING FOR INSTALLATION

A. Park on level ground with firm surface.

B. Check free space behind front tires when fully turned. Ensure enough clearance to accommodate mud flaps.




C. Align holes in metal and rubber then insert bolts and secure with nuts.

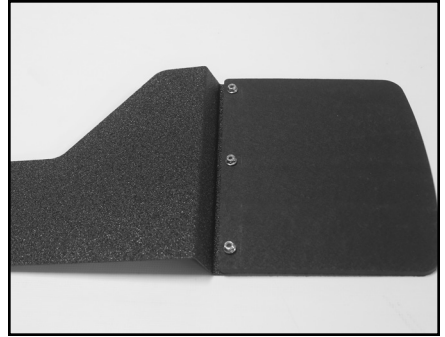

D. Determine mud flap alignment and edge orientation with wheels.


NOTE: Always check ground clearance of flaps. Suggested clearance without a load is 5-7" and with a load is 3" minimum to prevent dragging. Install on vehicles with suspension modifications or oversized tires may exceed suggested clearance. Mud flaps still function, though performance may be affected.

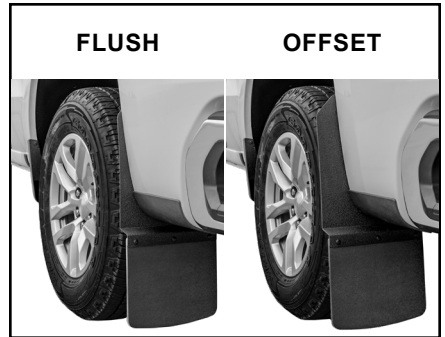

2: DETERMINE MUD FLAP MOUNTING LOCATION

A. Position in wheel well at desired height to determine mounting screw locations. Verify screws will contact solid surface.

⚠ CAUTION: Ensure all mounting hole sides are free of wiring, mechanical parts and are structurally sound.

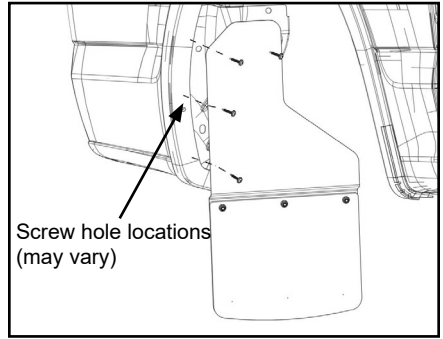

3: INSTALLING MUD FLAPS

A. Use angled screwdriver with self-drilling screw attach mud flap at the top.

B. Verify the mud flap is level then continue to attach mud flap with remaining screws.



NOTE: Use sufficient screws, kit provides 6 per mud flap or 4 if the stabilizing bracket is installed.



4: INSTALLING STABILIZING BRACKET (OPTIONAL)


NOTE: The stabilizing bracket is used to pull back mud flap for additional tire clearance, or square mud flap with tire.

A. To determine mounting hole locations, position stabilizing bracket to attach to mud flap and vehicle.



B. Use locking pliers to bend stabilizing bracket as needed.

NOTE: Ensure bends conform to mounting locations before attaching to mud flap and vehicle.

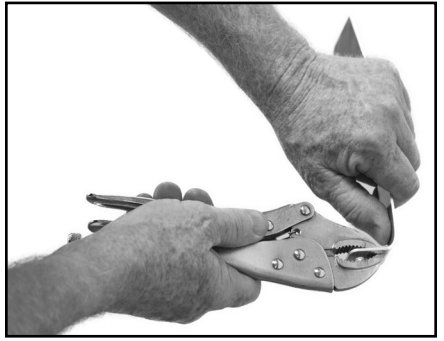

C. Using stabilizing bracket as guide use angled screwdriver with self-drilling screw to carefully drill a hole in mud flap, then remove screw.



4: INSTALLING STABILIZING BRACKET (Continued)

D. Insert screw from opposite side (closest to wheel) in mud flap, through stabilizing bracket and secure with nut.



E. With stabilizing bracket attached to mud flap, adjust stabilizing bracket until enough clearance is provided in wheel well.

F. Attach free stabilizing bracket end to vehicle with self-drilling screw and secure with nut when possible.

G. Repeat process for remaining mud flaps.



SAFETY AND MAINTENANCE

The operator can perform most of inspection and maintenance. It may be necessary to review the installation instructions.

- Periodically check all screws and nuts, retighten if needed.
- DO NOT hook up anything to mud flaps.
- If mud flap has been damaged, replace with new one.

NOTE: Inspection and/or maintenance should be performed anytime a malfunction is observed or suspected. If you need assistance inspecting and/or servicing your mud flaps, call customer service at 888-568-3709. Always use original equipment replacement parts for your mud flaps.

MANUFACTURER'S LIMITED WARRANTY

Agri-Cover, Inc. extends the following one (1) year Limited Warranty for the ROCKSTAR™ Hybrid Splash Guard Mud Flaps:

Agri-Cover, Inc. warrants a period of one (1) year from the date of manufacture that its ROCKSTAR™ Hybrid Splash Guard Mud Flaps are free from defects in workmanship, under normal use for the truck model it was intended for. This Limited Warranty does not cover any damage due to accident, abuse, misuse, alteration, neglect, improper installation, or ordinary wear and tear.

Agri-Cover, Inc.'s sole obligation under this Limited Warranty is limited to the repair or replacement at its option, of defective parts only. No labor or service allowance is given or implied. IN NO EVENT SHALL AGRI-COVER, INC. BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES. AGRI-COVER, INC. EXPRESSLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY, AND THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE LIMITED WARRANTY DESCRIPTION CONTAINED HEREIN.

For warranty, have serial number ready and fill out the warranty claim form at agricover.com/warrantyclaim or call Customer Service Department at 888-568-3709 to determine if only a replacement part is needed or if the mud flaps needs to be returned for inspection and repair. Goods to be returned must have a pre-authorized RA # (Return Authorization Number) - obtained by calling the number above. Mark the number on the package and ship it freight prepaid to address below. Agri-Cover, Inc. will pay freight to return goods to sender.

This Limited Warranty gives you specific legal rights and you may have other rights, which vary, from state to state.

For replacement parts shop at rockstarmudflaps.com or call Customer Service at 888-568-3709.



Agri-Cover, Inc.
Customer Service Dept
3000 Hwy 281 SE
Jamestown, ND 58401
Phone: 888-568-3709

Hours: 8:00 am - 5:00 pm CST Monday through Friday, except Holidays