

FULL WIDTH TOW FLAP SPECIAL BRACKET INSTRUCTIONS



02-08 DODGE/RAM 1500 03-09 DODGE/RAM 2500, 3500

Read and follow these special instructions along with the standard instructions carefully before installing or using this tow flap.

NOTICE TO INSTALLER: Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read special instructions. Save these special instructions for future reference.

PREPARATION

TOOLS NEEDED


- Ratchet with 15 mm socket

▲ CAUTION: Over tightening hardware may damage components or truck.


1: INSTALLING MOUNTING BRACKETS

A. At rear bumper, remove indicated nuts with ratchet and 15 mm socket. Retain for reinstall.

B. Remove existing bracket.

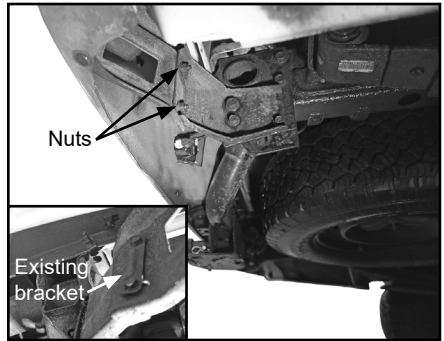

C. Insert existing bracket bolts through mounting bracket, then reinsert bolt into bolt holes.

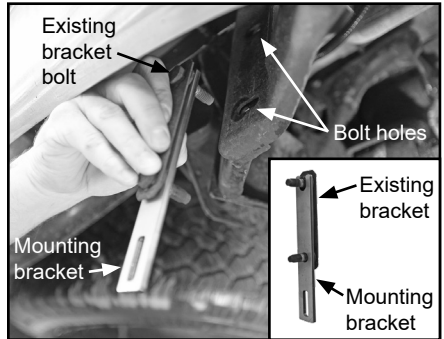

D. Secure with nuts and tighten with ratchet and 15 mm socket until snug, but not completely tight.

NOTE: Nuts will be fully tightened during tow flap installation.

E. Repeat Steps 1A-D to install mounting bracket on opposite side.

F. For remaining tow flap installation, refer to standard instructions.

